

CLASSIC TILE INC.

CORPORATE HEADQUARTERS: 325 PINE STREET, ELIZABETH, NJ 07206

(800)-352-2527


FAX: (908)-289-6266

TEL: (908)-289-8400

Web Site: www.Classictile.com

E-Mail: Classictile@optonline.net

STAINLESS STEEL & BRASS STUDDED RUBBER TILE

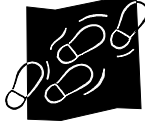

THE ULTIMATE FLOORING SYSTEM FOR WEAR AND DURABILITY

12 X 12 X 1/8" GAUGE RUBBER TILE
REINFORCED WITH
STAINLESS STEEL OR BRASS STUDS

SPECIFICALLY DESIGNED FOR ELEVATORS
ENTRANCE WAYS AND
EXTRA HEAVY WEIGHT BEARING AREAS

INSTALLATION INSTRUCTIONS:

- FLOOR MUST BE CLEAN AND SMOOTH
- INSTALL WHITE FELT PAPER OR SATURATED PAPER, AS DESIRED WITH MULTI-PURPOSE ADHESIVE.
- STUDDED TILE SHOULD BE INSTALLED WITH EPOXY, SMOOTH SIDE UP, AND ROLLED.
- FOR EASE OF CUTTING TILE ALONG WALLS, REMOVE STUDS CLOSEST TO CUTTING LINE! PULL STUDS OUT FROM BACK, AS YOU WOULD A THUMB TACK.
- PUNCH-OUT MATERIAL FROM HOLES AVAILABLE UPON REQUEST TO PLUG HOLES WHERE DESIRED.

FOR PRICING INFORMATION & SAMPLES

**PLEASE CALL:
(800) 352-2527
OR CONTACT YOUR**

**SALESPERSON
SALESPERSON**

CLASSIC TILE INC.

CORPORATE HEADQUARTERS: 325 PINE STREET, ELIZABETH, NJ 07206

(800)-352-2527

FAX: (908)-289-6266

TEL: (908)-289-8400

Web Site: www.Classictile.com

E-Mail: Classictile@optonline.net

STUDED RUBBER TILE

PRODUCT CHARACTERISTICS:

- 1) EACH 12 X 12 X 1/8 TILE HAS 144 STUDS**
- 2) STUDS ARE INSERTED THROUGH THE BACK OF THE TILE SO THAT THE FACE IS A SMOOTH SURFACE COMBINATION OF STEEL OR BRASS STUDS AND SURROUNDING MATERIAL**

IMPORTANT: BE SURE YOUR FLOOR COVERING AND ADHESIVES(S) ARE STORED ON SITE AT A TEMPERATURE OF 70F. TO 80F. FOR 24 HOURS BEFORE AND AFTER INSTALLATION.

These products are recommended for interior installation only. CAUTION: Do not install in areas where grease may be tracked, including commercial kitchens and bars.

Step 1: Remove any old floor covering and clean your sub-floor.

Step 2: Install white felt paper using a quality multi-purpose adhesive. Allow to dry.

Step 3: Using BR 721 epoxy lay tiles over felt being careful to install with the large disc stud side face down.

Step 4: Roll floor.

Helpful Hints:

- FOR EASE OF CUTTING TILE ALONG THE WALLS, REMOVE STUDS CLOSEST TO CUTTING LINE!

PULL STUDS FROM BACK, AS YOU WOULD A THUMB TACK.

- PUNCH OUT MATERIAL FROM HOLES AVAILABLE ON REQUEST TO PLUG HOLES WHERE DESIRED.

MAINTENANCE

SWEEP AND WASH FLOOR WITH A MILD DETERGENT AND WATER. FLOOR MUST BE DRIED WITH A SOFT CLOTH. NEVER LEAVE FLOOR WET